

WARNING
Check if the voltage indicated on the appliance fits the local mains voltage. Do not use the appliance if there is any damage on plug, mains cord or other parts. Do not go to any unauthorized person to replace or fix damaged main cord. Keep the mains cord away from hot surfaces. Do not plug in the appliance or operate the control panel with wet hands. Do not place the appliance against a wall or against other appliances. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance. Do not place anything on top of the appliance. Do not use the appliance for any other purpose than described in this manual. Do not let the appliance operate unattended. During hot air frying, hot steam is released through the air outlet openings, keep your hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the pan from the appliance. Surfaces may become hot during use (Fig. 2). Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.

Multi-Function, Electric Cooking Pan



Streetwize Accessories:
Unit 1, Royce Trading Estate, Ashburton Road West,
Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com
Technical enquiries: support@streetwizeaccessories.com
+44 (0)161 447 8597
www.streetwizeaccessories.com

PLEASE READ AND KEEP THESE INSTRUCTIONS BEFORE OPERATING THIS MULTI-FUNCTION ELECTRIC COOKING PAN.

IMPORTANT:

When using electrical appliances, basic safety precautions should always be followed:

1. Read and keep all instructions.
2. Do not touch the hot metal surface, use the handle always.
3. To protect against electric shock do not immerse cord, plug or temperature regulator in water or other liquid.
4. **WARNING:** This electrical appliance contains a heating function. Surfaces, also different than the functional surfaces, can develop high temperatures. Since temperatures are differently perceived by different persons, this equipment shall be used with CAUTION. The equipment shall be touch only at intended handles and gripping surfaces, and use heat protection like gloves or similar. Surfaces other than intended gripping surfaces shall get sufficiently time to the cool down before getting touched.
5. Unplug when not in use and before cleaning. Allow to cool before adding or removing parts.
6. Keep the appliance and its cord out of reach of children.
7. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
8. Use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use the cooker if pan, cable or plug are damaged.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. Extreme caution must be used when moving an appliance containing hot foods.
12. Always attach plug to appliance first, then plug cord in the wall outlet.
13. Do not use appliance for other than intended use.


CLEANING AFTER USE:

Name	Method	Remark
Hotplate	Clean the heat plate after using with a wet towel or paper, when it is still hot, if the residues are difficult to clean, put a little water on the plate and turn it on (make sure that the protection under the heat plate is provided). The plate will be heated and the residues can be rubbed away.	1. Do not use any detergent, nylon brush or metal brush, the heat plate will be damaged. 2. Do not put the hotplate into water or wash it with water when the heat plate is still hot otherwise it will not function and could catch fire.
Cover	Clean with soft sponge and a little detergent.	Do not use any thinner, benzene detergent or chemical disposed towel, this could damage the surface.
Automatic temperature controller	Clean with soft paper or dry soft towel.	Do not clean the discreteness of the automatic temperature controller, this could cause an electric shock or a fire.
After cleaning the multi-function electric cooking pan, dry it carefully with a soft cloth or towel and turn it on to DRY. After drying daub it with layer of cooking oil.		

CAUTIONS MEASURE TO OPERATE THE HOTPLATE

The surface of the heat plate is very glossy, so take care as follows:


- Do not use sharp or metal utensils made of metal. Do not cut foods on the heat plate.
- Do not put the automatic temperature regulator on the heat plate. It is not permitted to contact with the heat plate.
- Do not use a nylon or metal brush. This will damage the surface of the heat plate.
- The plate must be cleaned after each use with a dry and soft cloth.
- Do not sue if any part of the heat plate/temperature regulator, socket, cord or plus are damaged.

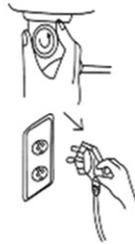


CAUTIONS MEASURES AND PROPOSALS

To avoid any injuries, fire, functioning error or electric shock, please follow these cautions:


- Stop use and bring the appliance to the next trader.
- Use the correct power supply for appliance.
- Do not use with other high watt appliances at same time or same socket.
- Do not tangle the cord
- Do not pull the plug by the cable - remove plug by holding actual plug.
- Do not clean the heat plate with water or any other liquid.
- After cleaning the appliance, you must dry it properly before use again.
- Do not place appliance on an unsteady place or near flammable materials (newspaper, paper, PVC table cover etc). The heat plate must be a minimum of 15cm away from walls and furniture.

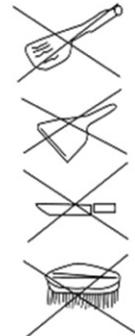

PRODUCT DESCRIPTION

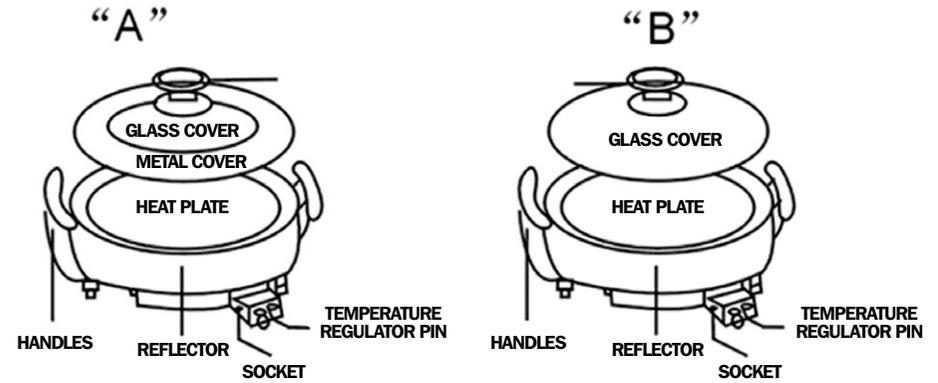

AUTOMATIC TEMPERATURE REGULATOR

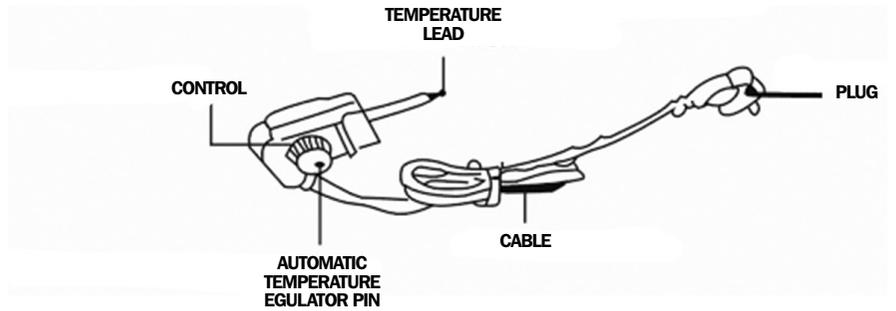


1. The automatic temperature regulator is a highly sensitive part, you must be very careful not to damage the part in any way.
2. Always use the automatic temperature regulator supplied with this appliance. Never use another regulator.
3. You must insert the automatic temperature regulator correctly for it to work. If removing, do not use excessive force as not to pull the cord.
4. If the automatic temperature regulator becomes damaged, stop using immediately and take it to a qualified electrician/store for repair.
5. Before connecting the automatic temperature regulator, you must check the scale of the automatic temperature regulator is set to off.

OPERATION INSTRUCTIONS

Before first use, clean the heat plate and cover.

1. Ensure the temperature is set to OFF. Insert the automatic temperature regulator in the socket of the cooker (A).
2. Plug into AC 230 Voltage socket (B).
3. Set the temperature scale to the correct setting of food you will be cooking.

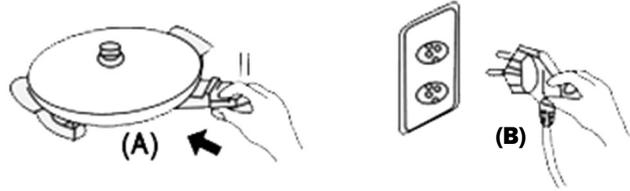

Voltage	Wattage
100 grade	Baked foods: hamburgers etc
150	Pan foods: scrambled eggs, ham, smoked meats.
200	
250	Pizza



COOKING

1. After warming the cooker for 5-10 minute, if the control light is on, you can begin making food.
2. Once food is done, you can keep it warm by setting the temperature setting to 'keep warm'.

- If temperature light is off, the cooker is ready to use.
- Please note there will be a sound from the cooking pan; this comes from the heater and the heat plate, and is normal.
- Do not put your hand, or any flammable material, underneath the appliance.

COVER

Use cover to keep food simmering or warm if necessary.

AFTER USING

1. Always turn the temperature to OFF.
2. Always pull out the plug from socket after each use, then remove the automatic temperature regulator from the heat plate and allow to cool before removed other parts.
3. Allow appliance to cool fully before cleaning.

TECHNICAL SPECIFICATION:

Voltage	220-240V 50Hz
Wattage	1500W
Temperature (adjustable):	Up to 240°C
Timer	0-30min